


MODEL:
TLCN-CRRGBW

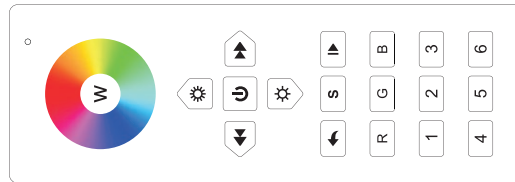

INTRODUCTIONS

IMPORTANT: READ ALL INSTRUCTIONS PRIOR TO INSTALLATION

Product Data

- Output RF signal
- Operation Frequency 915MHz
- Operating temperature 0-40°C
- Relative humidity 8% to 80%
- Dimensions 140x48x17mm
- Control 6 zones of RF receivers separately, and 6 scenes (of zones)
- RGBW color controller
- High sensitivity & stable touch color wheel; fast, precise color control.
- Compatible with all universal series RF receivers
- 1 receiver can be paired by max 8 different remote controls.
- Waterproof grade: IP20
- Power Supply 4.5V(3xAAA battery)


WARNINGS

THIS DEVICE CONTAINS AAA BATTERIES THAT SHALL BE STORED AND DISPOSED PROPERLY.
DO NOT EXPOSE THE DEVICE TO MOISTURE.

INSTALLATION

FUNCTION INTRODUCTION

- **[W] White channel:** Click to turn on/off, Press and hold down to increase or decrease intensity of the channel
- **[<<]** Press and hold down to slow down dynamic mode
- **[▼]** Press and hold down to decrease overall intensity
- **[R] [G] [B] Channel buttons.** Press and hold to increase or decrease the intensity of R.G.B. channels
- **[1] [2] [3] [4] [5] [6]** Zones of control Scene selection
- Indicator: indicates the state of remote control
- Touch Dial to change colour
- **[▲]** Press and hold down to increase overall light intensity
- **[Φ]** Click to turn ON/OFF all zones
- **[>>]** Press and hold down to speed up dynamic mode
- **[▶]** Play/Pause button, click to play/pause for 10 built-in modes
- **[S]** Scene selection, programing button

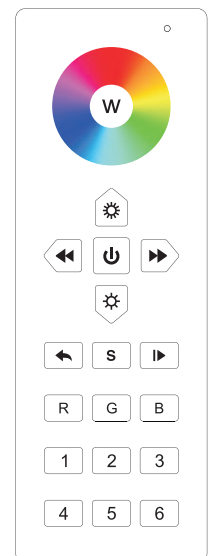


INSTALLATION

OPERATION


1 - Pair with RF receivers:

1. Confirm that the jumper is set to receiver. If not, move to correct position
2. If this is a new installation, Press and hold down "Learning Key" on the receiver for approximately 3 seconds until connected LED lights flicker twice, this means any previous pairings have been deleted successfully.
3. Turn on the RF-remote
4. On the RF receiver; press and release the "Learning Key"
5. On the RF Remote; Press a zone number; 1-6 (1 if doing a single zone)
6. Touch and spin the color wheel on RF remote
7. LED lights connected with the RF receiver will flicker once, you have paired this zone to your receiver.
8. The receiver is paired with the remote successfully.

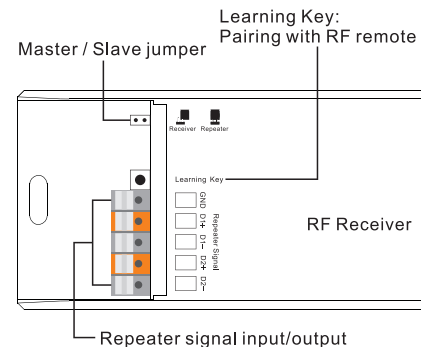


2. Single Zone: Save color/mode (Having completed Step 1)

1. Turn on the RF-remote
2. Click the number **[1]** button for your zone numbers
3. Adjust the **[R] [G] [B] [W]** buttons to select a color of your choosing.
4. Press and hold down the **[S]** button until the LED indicator flashes (blue) once
5. *Immediately* click any of the numbers **[1-6]** that you would like to save the color/scene to
6. *Repeat for the other five possible scenes.*

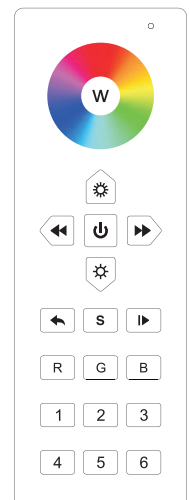

2A. Multiple Zone; Save scene/mode (Having completed Step 1)

1. Having paired two to six zones above. You are now ready to create scenes with these. Scenes are presets of one or more zones together.
2. Turn on the RF-remote.
3. Click the number **[1-6]** button for the zone you want to adjust.
4. Adjust the **[R] [G] [B] [W]** buttons to select a color of your choosing.
5. Press and hold down the **[S]** button until the LED indicator flashes (blue) once.
6. *Immediately* click any of the numbers that you would like to save the color/scene to.
7. *Repeat for the other five possible scenes.*

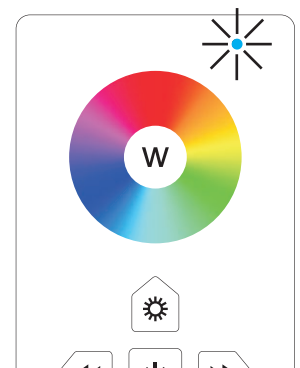

3. How to delete the pairing

Press and hold down "Learning Key" on the receiver for over 3 seconds until connected LED lights flicker twice, this means the pairing has been deleted successfully.